

# #124301, #124302

## Installation Instructions Sway Bar Disconnects Jeep TJ/XJ




READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS PRIOR TO INSTALLATION OF SYSTEM AND OPERATION OF VEHICLE.

### SAFETY WARNING

BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly / reassembly procedures and post installation checks must be known.

### INSTALLATION INSTRUCTIONS

1. Park and secure the vehicle on a level hard surface. Block the rear tires to avoid accidental movement.
2. Disconnect the front sway bar links. Save all fasteners. A small pickle fork will ease removal of the front sway bar links (TJ only).
3. Assemble and install the front anti-sway bar disconnects. Attach the 1325 "U" bracket to the top OE stud mount with the 3/8 x 1-1/2" bolt (7/16" x 1-1/2" on XJ). Attach one disconnect end to the "U" bracket using the 5/8" ID bushing, 5/8" O.D. x 1.375" sleeve, and 3/8 x 2-1/2" bolt with nut and washers.
4. Attach the lower disconnect end to the lower OE mount using the 3/4" I.D. bushing, hex step sleeve, and the 1/2 x 3-1/2" bolt with nut and washers. You will need to drill out the lower OE mount to 1/2". Tighten all fasteners.
5. Complete the above for the opposite side of the vehicle.
6. Check all fasteners after 500 miles.

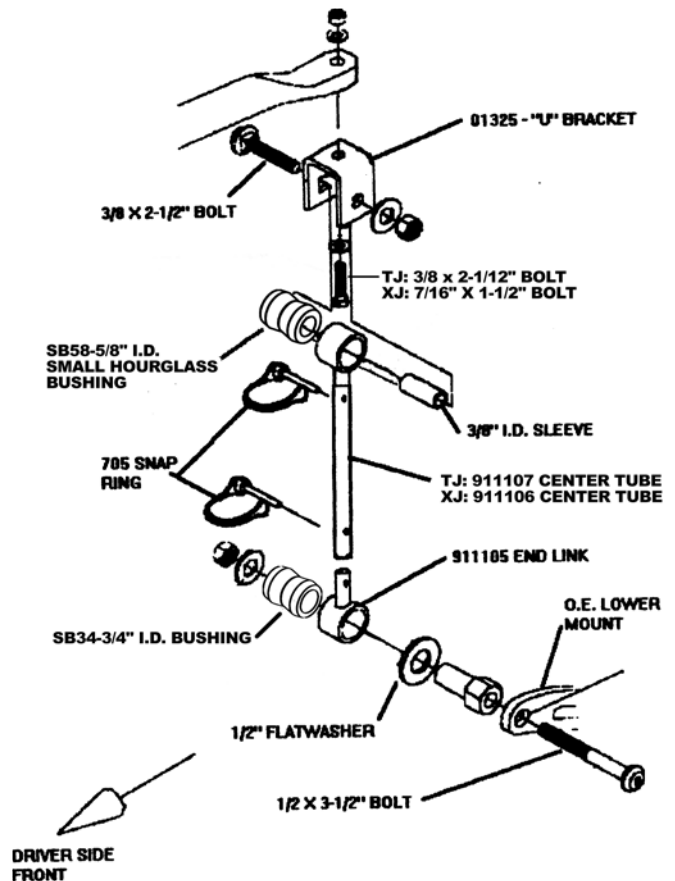

102 S. Michigan Avenue • Coldwater, MI 49036  
517-279-2135 • [www.bds-suspension.com](http://www.bds-suspension.com)