




RUBICON MANUFACTURING INC. 3290 MONIER CR. RANCHO CORDOVA, CA. 95742 916-473-4600

## INSTALLATION INSTRUCTIONS FOR GEN2 SWAY BAR DISCONNECTS

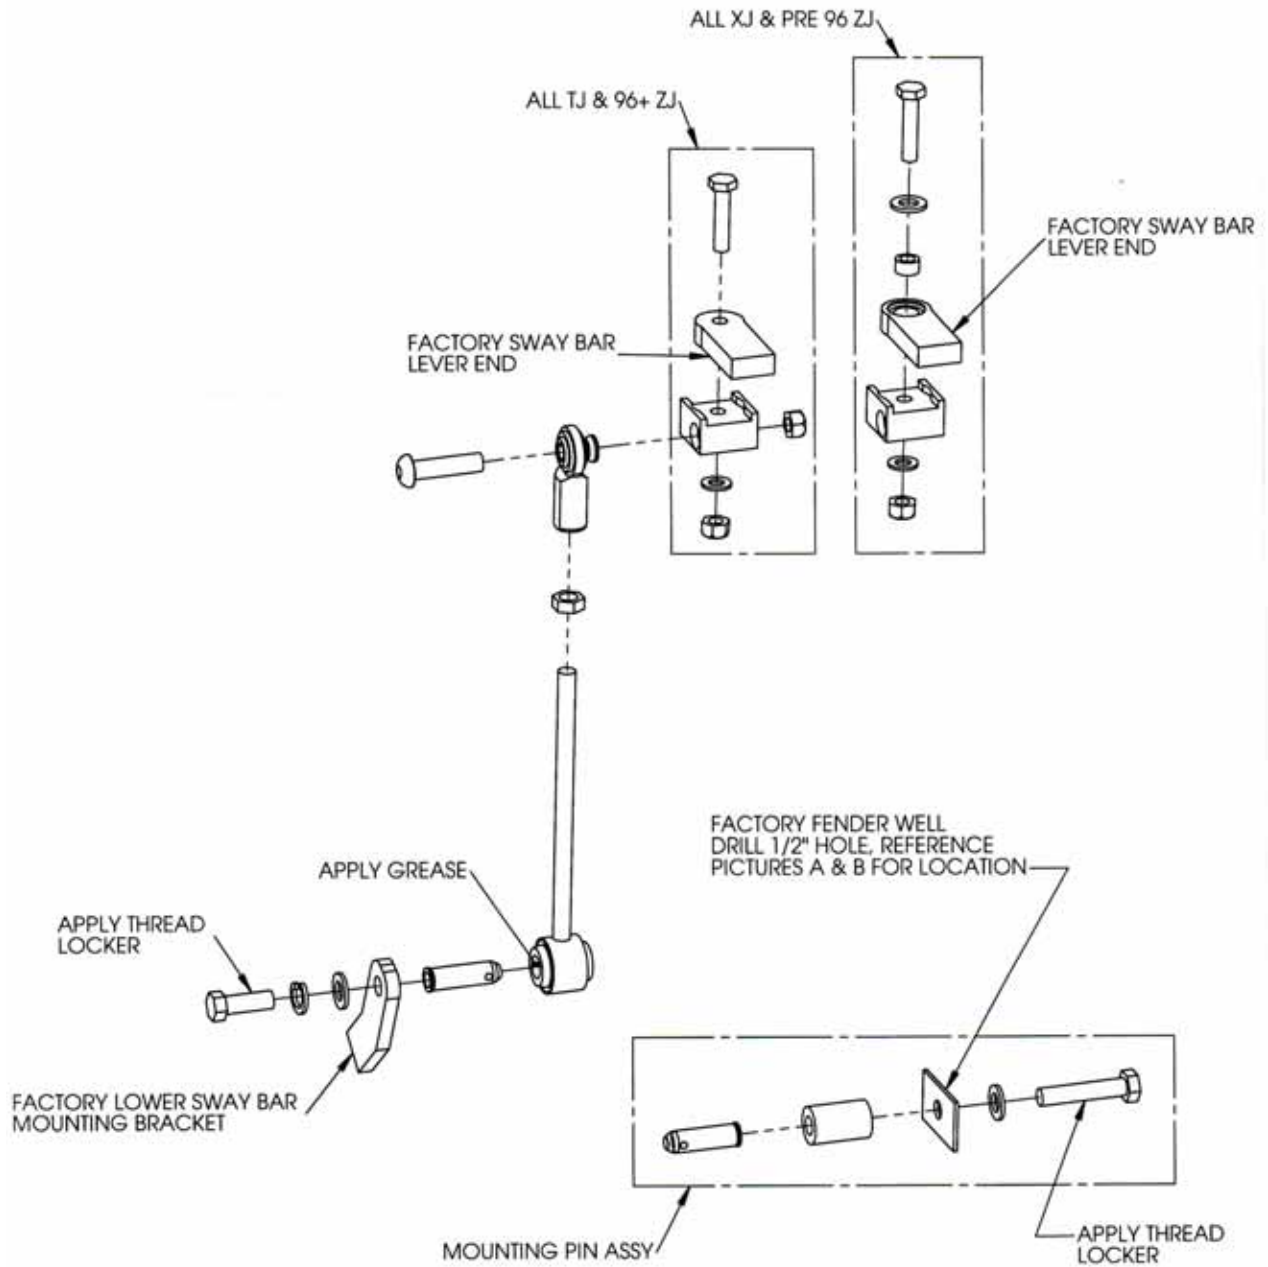



**PICTURE -A-**  
MOUNTING PIN HOLE LOCATION & MOUNTING ORENTATION FOR ALL TJ'S

**NOTE- ABOVE IMAGE SHOWS 11" DISCONNECTS (P/N RE1142, FOR 4.5-5.5" LIFTS)**  
FOR 2-3.5" LIFTS, 9" DISCONNECTS ARE USED (P/N RE1141), MOUNT PIN APPROX 2" FORWARD FROM ABOVE POSITION  
FOR 0-2" LIFTS, 7" DISCONNECTS ARE USED (P/N RE1140), MOUNT PIN APPROX 4" FORWARD FROM ABOVE POSITION



**PICTURE -B-**  
MOUNTING PIN HOLE LOCATION & MOUNTING ORENTATION FOR ALL XJ & ZJ'S, W/O RE SWAY BAR RELOCATION BRACKETS (P/N RE921)



MOUNTING ORENTATION FOR ALL XJ & ZJ'S WITH RE SWAY BAR RELOCATION BRACKETS (P/N RE921)

**GENERAL INSTALLATION TIPS**



1. FOR 11" TJ DISCONNECTS (P/N RE1142), IT IS NECESSARY TO SLIGHTLY BEND FORWARD, THE LOWER PART OF THE FENDER SUPPORT STRUCTURE, TO MAKE CLEARANCE FOR THE SWAY BAR LEVER.